




## THE WEDGE-POLE GUIDE P/N 1048-2 INSTALLATION INSTRUCTIONS

For additional assistance call 888-514-0083 between 8AM-5PM EST or email: info@pactoolmounts.com

### CAUTION

To avoid the risk of personal injury, property damage or product damage, please use the included fasteners for mounting.


- \* The bracket must be securely mounted to a stable surface and material.
- \* When mounting bracket to PAC TRAC aluminum products **P/N 7000, P/N 7020, P/N 7040, P/N 7050** with the included Trac Lok inserts **P/N 7016**, torque the screws to a maximum 15 in-lbs.
- \* PAC recommends regular and frequent inspections to be certain of proper operation and installation.

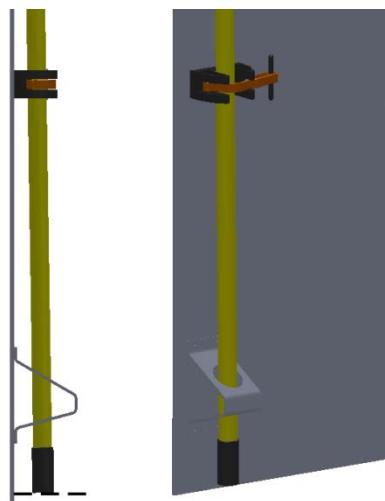


WORKS BEST WITH POSITIVE LOCKING BRACKETS

MTG. HARDWARE for PAC TRAC	QTY
P/N 2046 #10-24 x 1 S.S. S.S. Pan Head Screw	4
P/N 7016 Trac Lok Insert	4

STANDARD MTG. HARDWARE	QTY
P/N 2098 1/4-20 x 3/4 S.S. S.S. Pan Head Screw	4
P/N 2069LN 1/4-20 Nylon Locking Nut	4

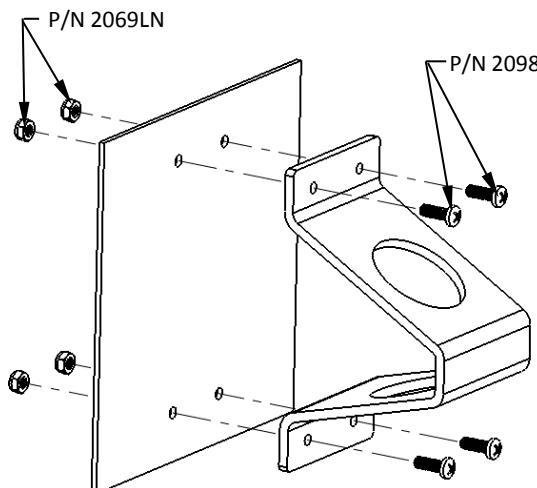

**FIGURE 1**  
(Thru Mounting Method)

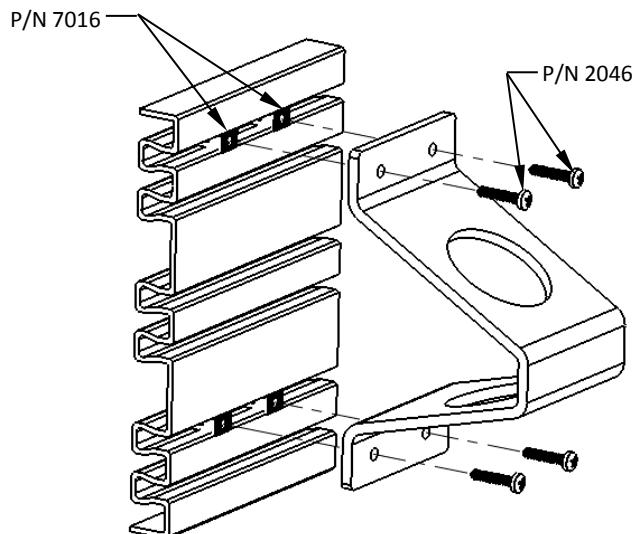

**FIGURE 2**  
(PAC TRAC Mounting)