



SUPER ADJUSTAMOUNT KIT - STD P/N K5050

SUPER ADJUSTAMOUNT KIT - SHORT P/N K5050S

SUPER ADJUSTAMOUNT KIT - LONG P/N K5050L

INSTALLATION INSTRUCTIONS

For additional assistance call 888-514-0083 between 8AM-5PM EST or email: info@pactoolmounts.com

CAUTION

To avoid the risk of personal injury, property damage or product damage, please use the included fasteners for mounting.



- * The bracket must be securely mounted to a stable surface and material.
- * When mounting bracket to PAC TRAC aluminum products **P/N 7000, P/N 7020, P/N 7040, P/N 7050** with the included Trac Lok inserts **P/N 7016**, torque the screws to a maximum 15 in-lbs.
- * If using optional Channel Nuts **P/N 3023 or P/N 3024**, torque the screws to a maximum 25 in-lbs.
- * PAC recommends regular and frequent inspections to be certain of proper operation and installation.

MTG. HARDWARE for PAC TRAC	QTY
 P/N 2049 #10-24 x 3/4 S.S. S.S. Pan Head Screw	2
 P/N 7016 Trac Lok Insert	2

STANDARD MTG. HARDWARE	QTY
 P/N 3017 1/4-20 x 1 S.S. S.S. Pan Head Screw	2
 P/N 2069LN 1/4-20 Nylon Locking Nut	2



Bracket Mounting

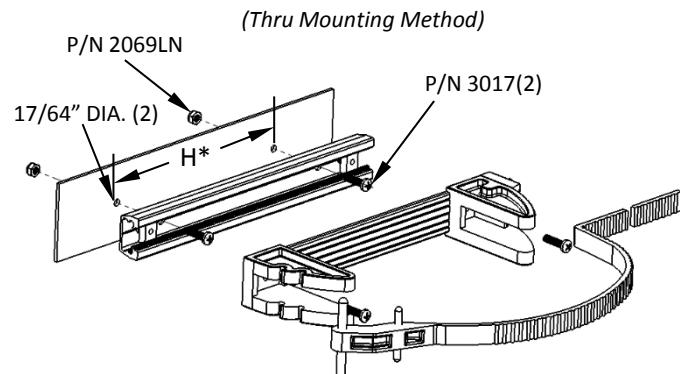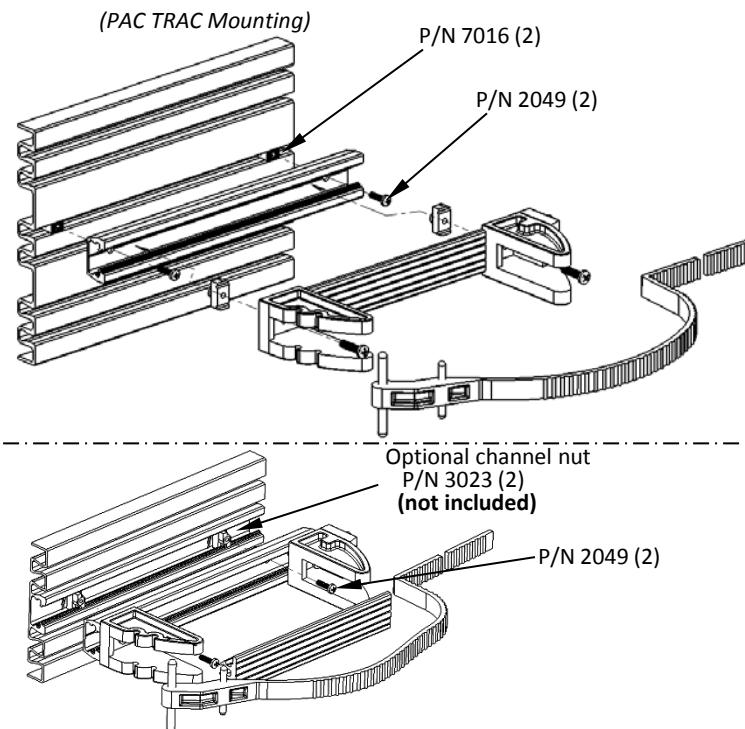

H = HOLE SPACING

P/N K5050 H= 8.0"




P/N K5050S H= 3.875"

P/N K5050L H= 20.0"

- ❖ Additional holes may be required to suit application and avoid interference with channel nuts.


Bracket Adjustment

To adjust the module position, remove and reposition the channel nuts as shown.

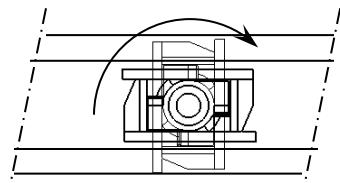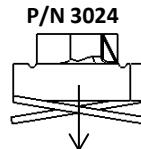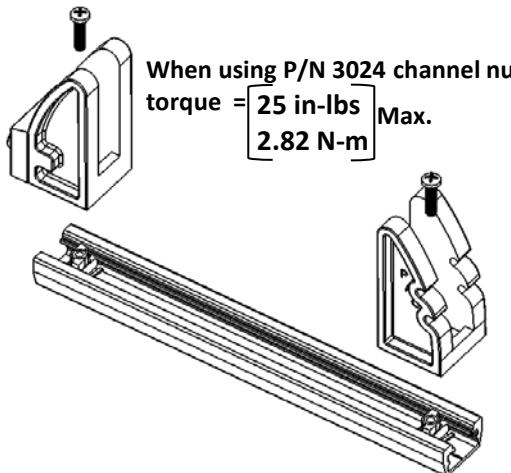


Push and Rotate nut in strut channel.

To set strap length, loosen clamp screws and adjust to suit application.

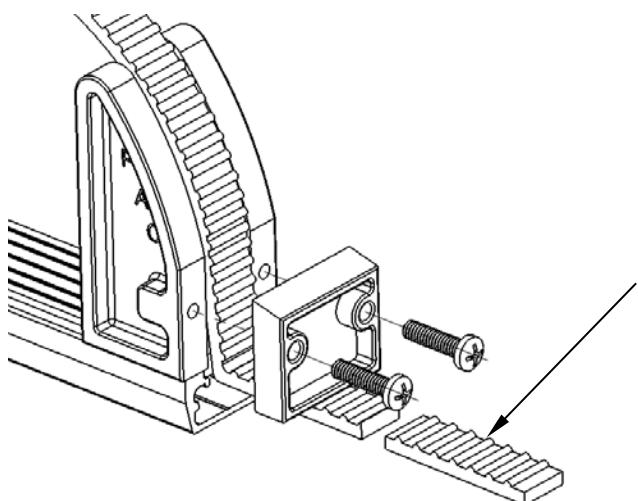

Excess strap length may be cut after final adjustments have been performed.

To insert channel cushion, center over strut and press in. Lubricate with a soap & water solution underside of channel cushion to assist in assembly.

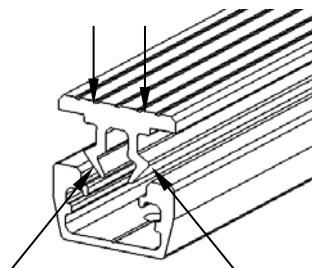

APPLY SOAP AND WATER SOLUTION TO THESE AREAS TO FACILITATE INSTALLATION!